
## TYPICAL SEDIMENT CONTROL **FILTRATION INSTALLATION**

Metal Absorption Using High Flow Pump & One Micron Filter Sock by Pure Filter

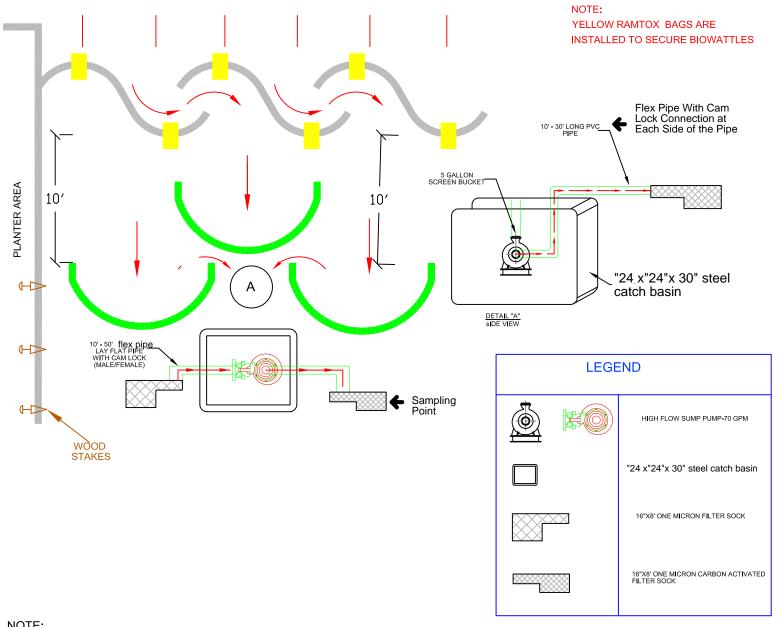

## NOTE:

- PRIOR TO INSTALLATION CLEAN THE ENTIRE LOT UP TO 40' RADIUS, MAKE SURE ENTIRE AREA IS FREE FROM 1. DIRT, SAND, SOIL AND SEDIMENT. IN FRONT OF STORM DRAIN OR RUN OFF NEXT TO PLANTER AREA, INSTALL BIOWATTLE AND SECURE THEM WITH WOOD STAKES
- 2. UPON INSTALLATION OF GREEN FILTERS (SILTSOXX) CLEAN AND VACUUM THE BROWN POWDER THAT RELEASE FROM GREEN FILTERS
- 2. INSTALL GRAY BIO WATTLES (FIBER ROLLS) AS SHOWN IN SNAKE STYLE
- 3. INSTALL GREEN SILTSOXX FILTER AS MOON STYLES AS SHOWNS
- INSTALL BAMTOY SAMPLING BAG AS SHOWING DETAIL "A"

4. INSTALL RAMTOX SAMPLING BAG AS SHOWING DETAIL "A"			
	ENVIRO SILTSOXX FILTER (FROM FILTREXX)-10' LONG	DRAINAGE FLOW DIRECTION	TRIANGLE SAMPLING POINT
	DOUBLE RAMTOX SAMPLING BAG (YELLOW BAG) CONTAINS 3/4 WASHED GRAVEL	BIOWATTLE (FIBER ROLL) 8X25' LONG	YELLOW DOUBLE WALL RAMTOX SAMPLING BAGS WITH BLACK FILTER CLOTH