


TYPICAL SEDIMENT CONTROL FILTRATION INSTALLATION

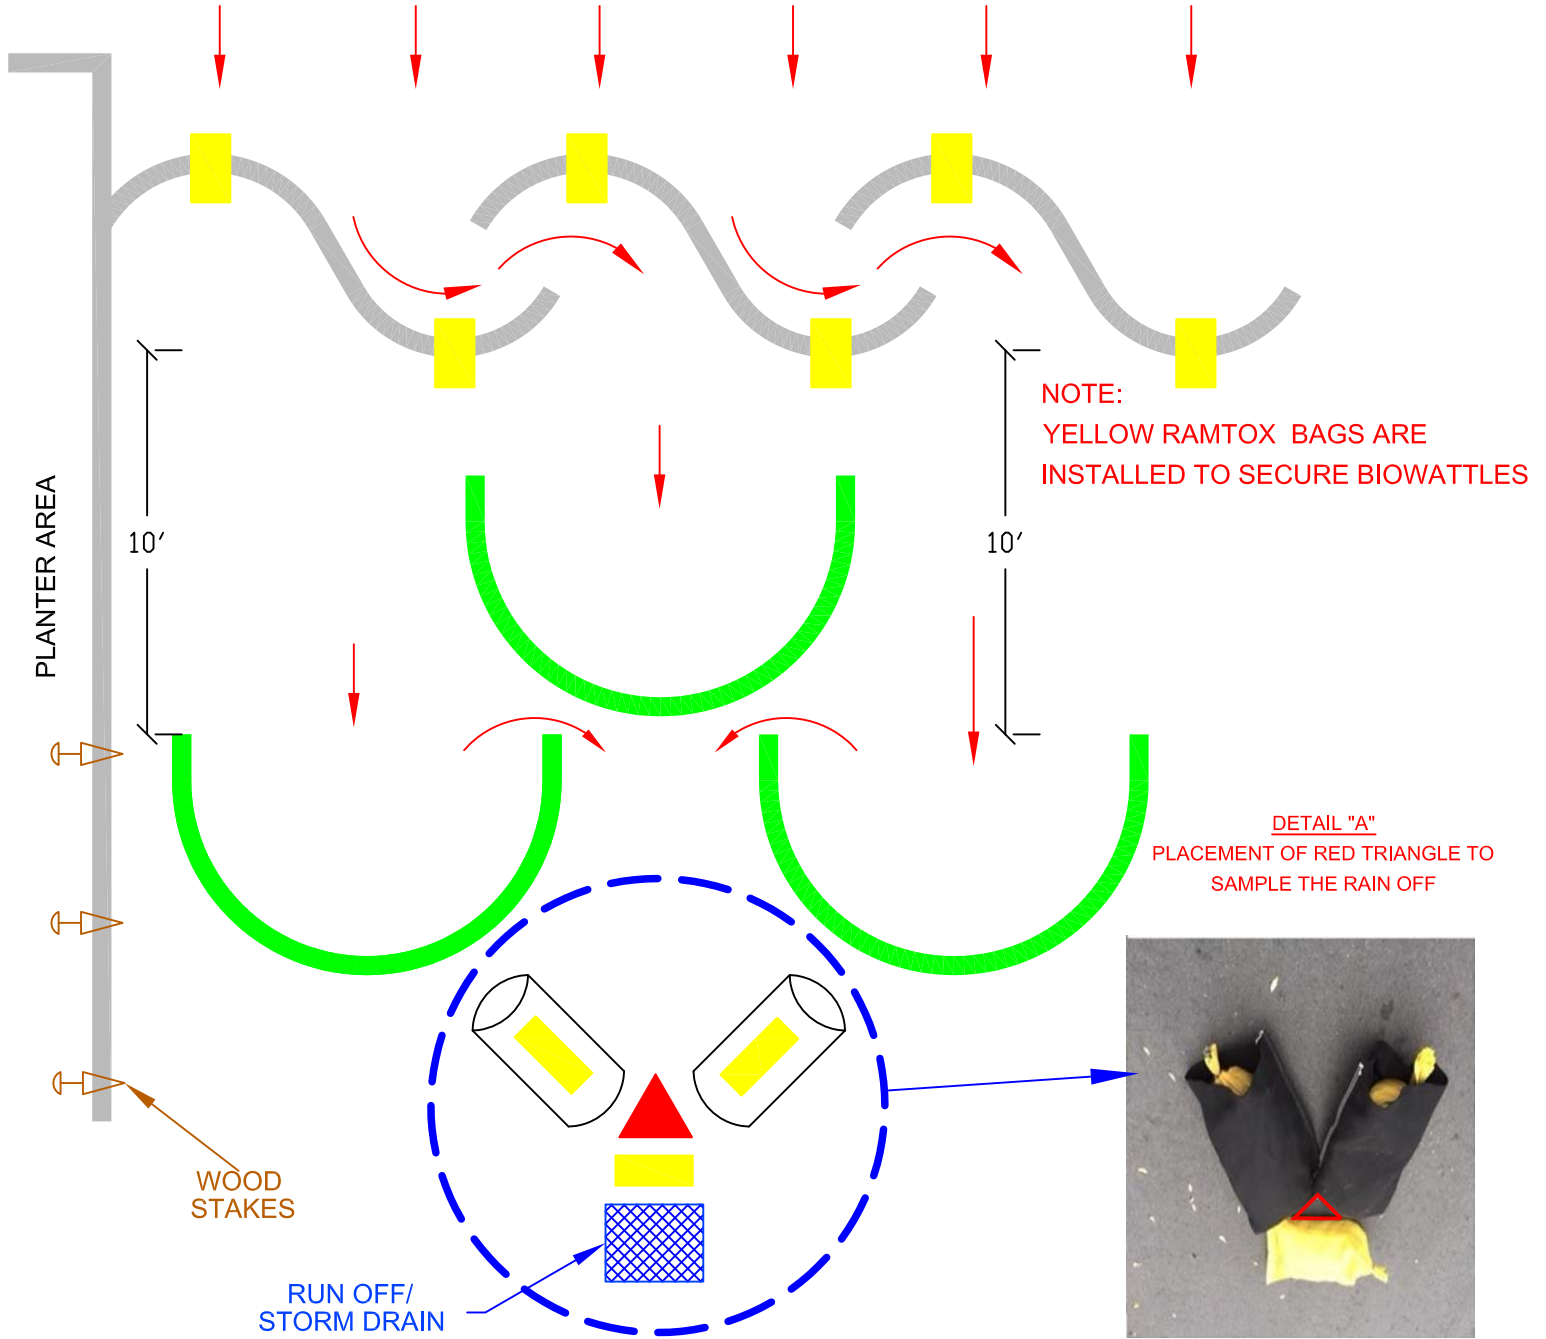

NOTE:

1. PRIOR TO INSTALLATION CLEAN THE ENTIRE LOT UP TO 40' RADIUS, MAKE SURE ENTIRE AREA IS FREE FROM DIRT, SAND, SOIL AND SEDIMENT. IN FRONT OF STORM DRAIN OR RUN OFF NEXT TO PLANTER AREA, INSTALL BIOWATTLE AND SECURE THEM WITH WOOD STAKES
2. UPON INSTALLATION OF GREEN FILTERS (SILTSOXX) CLEAN AND VACUUM THE BROWN POWDER THAT RELEASE FROM GREEN FILTERS
2. INSTALL GRAY BIO WATTLES (FIBER ROLLS) AS SHOWN IN SNAKE STYLE
3. INSTALL GREEN SILTSOXX FILTER AS MOON STYLES AS SHOWNS
4. INSTALL RAMTOX SAMPLING BAG AS SHOWING DETAIL "A"

	<p style="color: red; font-weight: bold;">ENVIRO SILTSOXX FILTER (FROM FILTREXX)-10' LONG</p>		<p style="color: red; font-weight: bold;">DRAINAGE FLOW DIRECTION</p>		<p style="color: red; font-weight: bold;">TRIANGLE SAMPLING POINT</p>
	<p style="color: red; font-weight: bold;">DOUBLE RAMTOX SAMPLING BAG (YELLOW BAG) CONTAINS 3/4 WASHED GRAVEL</p>		<p style="color: red; font-weight: bold;">BIOWATTLE (FIBER ROLL) 8X25' LONG</p>		<p style="color: red; font-weight: bold;">YELLOW DOUBLE WALL RAMTOX SAMPLING BAGS WITH BLACK FILTER CLOTH</p>